

We recommend using the Netgear® N600 Wireless Dual Band Router with the Mobile Party Print system.



To configure your N600 router without manually changing the settings:

1. Open the Netgear® settings by opening a browser to <http://www.routerlogin.net> in the address bar.
2. Use the username and password listed on the back of the router.
3. Click on the Advanced tab.
4. Open Administration > Backup Settings.
5. Click on the Browse button below Restore saved settings from a file.
6. Navigate to the Party Print installation CD, and select Netgear_Settings.cfg.
7. Click on Restore to start the configuration process.
8. Touch Logout to close the window.



Settings (after loading file)
IP address: 192.168.1.254
Router Subnet: 255.255.255.0
Wireless SSID: Party Print
password : [none]