

Print Media

1. Load the paper with the arrow pointing toward the printer (DNP ID Photo watermark side down). Remove the protective sheet and set it aside for future use as a cleaning sheet. Insert the paper tray until it clicks into place.

2. Press the PUSH OPEN area at the top of the cartridge compartment to open it. Insert the print cartridge until it clicks into place.

3. Attach the supplied ferrite core to the end of the cord as shown. Connect the power cord to the printer and plug the other end to an outlet. Press the power button on the front panel.

Installing the BT dongle

The ID400 will support the Sony UPXC200 and UPXC300 passport cameras with the installation of the BT-MicroEDR2X Bluetooth dongle by providing a wireless connection for effortless passport and ID photo printing photo.


2. Power off the unit before inserting the BT-MicroEDR2X as shown.




4. When the unit is ready, BT will appear on the LCD display.



1. Remove the slot cover on the front of the unit.

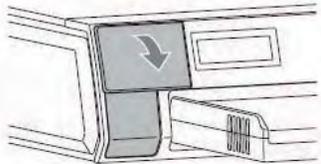

3. Replace the slot cover and power up the unit.

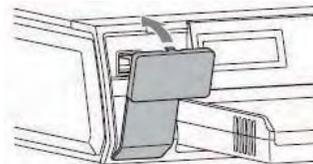

UPX Camera

To add the ID400 printer to the Sony UPX camera:

1. Set the camera to camera mode.
2. Press Menu & scroll to SETUP; press enter.
3. Scroll to Bluetooth ; press enter.
4. Select ADD PRINTER
5. Select SEARCH; press enter.
6. The ID400 will appear as SonyUP-DSID .
7. Select ADD then press enter.
8. Exit out and perform a test print.



Bluetooth MENU EXIT

FOUND PRINTER LIST

1 SONY LP-DX100 [1]
ADDRESS 10:A1:F1:23:C0:9

Sony UP-DSID
ADDRESS 00:18:DC:00:32:DF

3 ADDRESS

ADD CANCEL
SELECT ENTER

Sony UPXC200 Found Printer List



Bluetooth MENU EXIT

FOUND PRINTER LIST

Sony UP-DSID
ADDRESS 00:18:DC:00:32:DF

2 ADDRESS

3 ADDRESS

ADD CANCEL
SELECT ENTER

Sony UPXC300 Found Printer List